



 

 









 



 


















Original	Substituto
 Power	 Power
 TV/RAD	 TV/Radio /
 Q.Menu	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 Guide	 Guide / EPG / -/--
 []/Ratio	 Picture / Format
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Substituto
 List	 Shift + Smart / List
 Q.View	 Display / Media
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 FAV	 Fav / Marker / PC
 P+	 CH+ / Page+
 APP/*	 Audio / Lang I/II
 P-	 CH- / Page-
 [≡]/Text	 Text / Goto
 Info	 Info / Angle
 Smart	 Smart / List
 My APPS	 Sound / Title
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 T.OPT	 Setup / OPT /
 Up	 Up





Original	Substituto	Original	Substituto
 Down	 Down		
 Right	 Right		
 Left	 Left		
 OK	 OK		
 Settings	 Menu / Home		
 *	 Zoom / Size		
 <<<	 <<< / Tune-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 >>>	 >>> / Tune+		
 Stop/Line Tv	 Stop / Hold		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

