
 




 
 



 



 
 

 


 
 

 




Original	Substituto	Original	Substituto
 Power	 Power	 Equalizer	 Options
 Open/Close	 Eject	 Special EQ	 Dual
 Vol+	 Vol +	 (i)	 Info
 Vol-	 Vol -	 1	 1
 F	 Menu	 2	 2
 Mute	 Mute	 3	 3
 Preset/Folder Up	 Ch +	 4	 4
 Prset/Folder Down	 Ch -	 5	 5
 Jukebox/Memor	 Red	 6	 6
 Auto Dj	 Green	 7	 7
 Delete	 Blue	 8	 8
 Repeat	 Text	 9	 9
 Stop	 Stop	 0	 0
 >>I/Tuning+	 >>I	 Clock	 Shift + AV
 I<</Tuning-	 I<<	 Alarm	 Smart
 Play / Pause	 Pause	 Voice Cancellor	 Yellow
 Play / Pause	 Play	 Sleep	 Sleep



