



Original	Substituto	Original	Substituto
	TV		TV/Radio /
	Power		Power
	Input		AV / Input / RDS
	PIP		D.Menu / Top
	Zoom -		I<< / Preset-
	Zoom +		>>I / Preset+
	Sleep		Sleep / Timer
	Text		Text / Goto
	SSM		Sound / Title
	PSM		Picture / Format
	I/II		Audio / Lang I/II
	Menu		Menu / Home
	ARC		Info / Angle
	Exit		Exit / Cancel / Clear
	Left		Left
	Up		Up
	Right		Right

Original	Substituto	Original	Substituto
	OK		OK
	Down		Down
	Red / PIP PR -		Red / Netflix / Search
	Red / PIP PR -		Shift + CH- /
	Green / PIP PR +		Green / APP / Repeat
	Green / PIP PR +		Shift + CH+ /
	Yellow / Swap		Yellow / YouTube / Repeat
	Yellow / Swap		Back / Return
	Blue / PIP Input		Shift + AV / Input / RDS
	Blue / PIP Input		Blue / Prime Video / Random
	Vol +		Vol+
	PR +		CH+ / Page+
	Vol -		Vol-
	Mute		Mute / Dimmer
	List		Smart / List
	PR -		CH- / Page-
	1		1





	Original	Substituto		
				Fav / Marker / PC
				Display / Media
				Zoom / Size
				Play / Slow
				Pause / Step / Freeze
				Stop / Hold
				Shift + Sleep / Timer
				Rec / Rec Mode

	Original	Substituto		
				Shift + Text /
				Setup / OPT /





 









 



 

 

 



 

 















Original	Substituto
Power DVD	Power
Menu	Menu / Home
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Substituto
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
>>	>> / Preset+
<<	<< / Preset-
Power Audio	Shift + Power
Vol+ Audio	Vol+
Vol- Audio	Vol-
Mute Audio	Mute / Dimmer










 



 


 








 
 

Original	Substituto	Original	Substituto
	Power		Power
	Input		AV / Input / RDS
	PR+		CH+ / Page+
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Original	Substituto	Original	Substituto
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+






 


 
 



 



Original	Substituto
 Power STB	 Power
 Input STB	 AV / Input / RDS
 Menu STB	 Menu / Home
 Up STB	 Up
 OK STB	 OK
 Down STB	 Down
 Right STB	 Right
 Left STB	 Left
 Vol+ STB	 Vol+
 Vol- STB	 Vol-
 Mute STB	 Mute / Dimmer
 PR+ STB	 CH+ / Page+
 PR- STB	 CH- / Page-
 1 STB	 1
 2 STB	 2
 3 STB	 3
 4 STB	 4

Original	Substituto
 5 STB	 5
 6 STB	 6
 7 STB	 7
 8 STB	 8
 9 STB	 9
 0 STB	 0
 Power Cable	 Shift + Power
 Menu Cable	 Shift + Menu /
 Up Cable	 Shift + Up
 OK Cable	 Shift + OK
 Down Cable	 Shift + Down
 PR+ Cable	 Shift + CH+ /
 PR- Cable	 Shift + CH- /
 Vol+ Cable	 Shift + Vol+
 Vol- Cable	 Shift + Vol-
 Mute Cable	 Shift + Mute / Dimmer
 1 Cable	 Shift + 1





	Original	Substituto	
	2 Cable	 +  Shift + 2	
	3 Cable	 +  Shift + 3	
	4 Cable	 +  Shift + 4	
	5 Cable	 +  Shift + 5	
	6 Cable	 +  Shift + 6	
	7 Cable	 +  Shift + 7	
	8 Cable	 +  Shift + 8	
	9 Cable	 +  Shift + 9	
	0 Cable	 +  Shift + 0	

	Original	Substituto

