

| Original        | Substituto                                                                            | Original | Substituto |
|-----------------|---------------------------------------------------------------------------------------|----------|------------|
| Power           |      | Power    |            |
| Mute            |      | Mute     |            |
| CD Play/ Pause  |      | Play     |            |
| CD Play/ Pause  |      | Pause    |            |
| CD Stop         |      | Stop     |            |
| TAPE Rec        |      | Rec      |            |
| CD I CD I << << |      | I <<     |            |
| TAPE <<         |      | <<       |            |
| TAPE >>         |      | >>       |            |
| CD >> >>I       |      | >>I      |            |
| D. Skip         |     | List     |            |
| SURR            |    | Dual     |            |
| Program         |    | Options  |            |
| Sleep           |    | Sleep    |            |
| Repeat          |    | Text     |            |
| TAPE Rev. Play  |    | Left     |            |
| TAPE Stop       |    | Ok       |            |
| TAPE Play       |    | Right    |            |
| Volume+         |    | Vol +    |            |
| EQ Patt.        |    | Smart    |            |
| Preset +        |    | Ch +     |            |
| Volume-         |    | Vol -    |            |
| XDSS            |    | Media    |            |
| Preset -        |    | Ch -     |            |
| 1               |    | 1        |            |
| 2               |    | 2        |            |
| 3               |    | 3        |            |
| 4               |   | 4        |            |
| 5               |  | 5        |            |
| 6               |  | 6        |            |
| 7               |  | 7        |            |
| 8               |  | 8        |            |
| 9               |  | 9        |            |
| 0               |  | 0        |            |



The image shows a black universal remote control with a variety of buttons. At the top, there is a red power button, a black mute button, and an orange shift button. Below these are four blue buttons labeled TV, DVD, SAT, and AUX. The next row contains four buttons: PLAY MODE (with a right arrow), PAUSE (with two vertical bars), STOP (with a square), and REC MODE (with a red dot). The following row has four buttons: REWIND (with two left arrows), FASTER REWIND (with a left arrow and a double bar), PLAY/PAUSE (with two right arrows), and FASTER PLAY (with a right arrow and a double bar). The next row contains four buttons: DISC NAV, SOUND, AD, and SETTINGS. Below these are four buttons: LIST, DUAL, SUBT, and OPT. The following row has four buttons: PROG, SEARCH, PICTURE, and ECO. The next row contains four buttons: SLEEP, TV/R, FORMAT, and 3D. The following row has four buttons: E-MANUAL, REPEAT, ZOOM, and TIMER. The final row in this section has four buttons: D.MENU, TEXT, a channel up/down arrow, and AV. Below this is a section with two buttons: TOP MENU (with a MENU icon) and DISPLAY (with an INFO icon). In the center is a large blue directional pad with an OK button in the middle. To the left of the pad are CLEAR and EXIT buttons, and to the right are RETURN and BACK buttons. Below the pad are four buttons: + VOL, HOME, SMART, + CH, and - VOL, APP, MEDIA, - CH. The next row contains four buttons: 1, 2, 3, 4, 5, 6, 7, 8, 9, and 0. Below these are four buttons: GUIDE, 0, FAV, and PRE-CH. The final row contains four buttons: A, B, C, and D. At the bottom, there is a logo for Mandis shop and the website address www.mandis.tv.