















 

 

 

 



 













Original	Substituto	Original	Substituto
	Power		Power
	Energy		Eject / Surround
	AV.Mode		Zoom / Size
	Input		AV / Input / RDS
	TV/Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Q.View		Display / Media

Original	Substituto	Original	Substituto
	Vol+		Vol+
	FAV/Mark		Fav / Marker / PC
	CH+		CH+ / Page+
	Vol-		Vol-
	3D/Char/Num		Sound / Title
	CH-		CH- / Page-
	Mute/Delete		Mute / Dimmer
	Premium		Sleep / Timer
	Home		Menu / Home
	Q.Menu/3D		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Guide		Guide / EPG / -/-



