



 

 



 



 

 

 

 

 

 

 

 

























 





 

 

 
 
 





Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Power		Power
	TV/AV		AV / Input / RDS
	Multimedia		Display / Media
	I-II		Audio / Lang I/II
	List		Smart / List
	ARC		Zoom / Size
	Menu		Menu / Home
	Up		Up
	PR+		CH+ / Page+
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	PR-		CH- / Page-
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	PSM		Guide / EPG / -/--
	0		0
	SSM		Fav / Marker / PC
	Split Zoom		Picture / Format
	PIP DW		Exit / Cancel / Clear
	Sleep		Sleep / Timer
	[=?]/Reveal		Subtitle / EQ
	Green/PIP PR+		Green / APP / Repeat



