



 











Original	Substituto	Original	Substituto
	Power		Power
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Wide		Picture / Format
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow/><		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	Menu		Menu / Home
	9		9
	0/AV		AV / Input / RDS
	0/AV		0
	i		Info / Angle
	Up		Up
	Cancel		Shift + Exit / Cancel / Clear
	Left		Left
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	OK		OK
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Lang(AD)		Audio / Lang I/II
	Subt.		Subtitle / EQ
	FAV		Fav / Marker / PC





Original	Substituto	Original	Substituto
 Tv/Radio	 TV/Radio /		
 P+	 CH+ / Page+		
 Vol+	 Vol+		
 Guide	 Guide / EPG / -/--		
 Mute	 Mute / Dimmer		
 Text	 Text / Goto		
 P-	 CH- / Page-		
 Vol-	 Vol-		

