


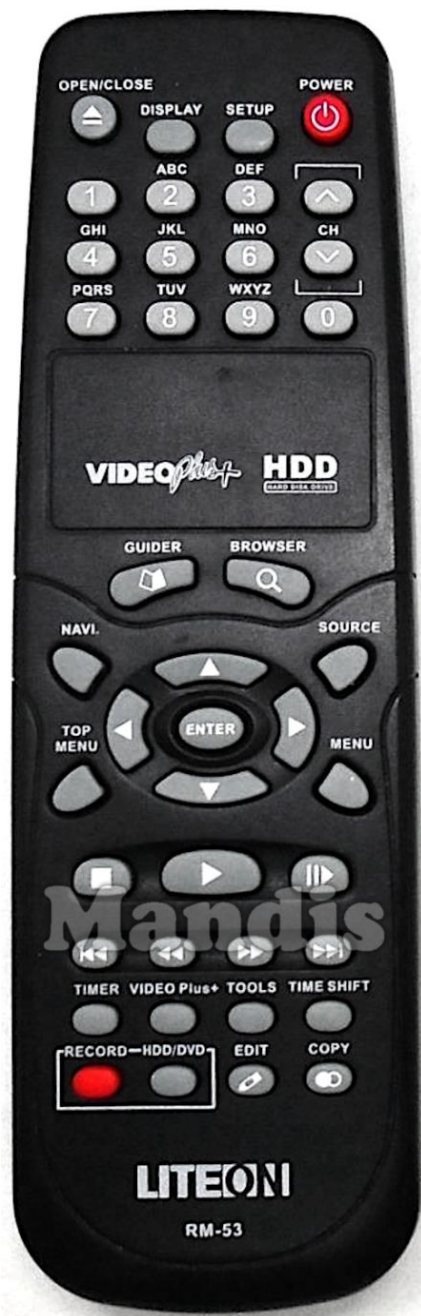

Original	Substituto
 Open / Close	 Eject / Surround
 Display	 Display / Media
 Setup	 Setup / OPT /
 Power	 Power
 1	 1
 2	 2
 3	 3
 CH+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 0	 0
 Guider	 Guide / EPG / -/-

Original	Substituto
 Browser	 Info / Angle
 Navi.	 Fav / Marker / PC
 Up	 Up
 Source	 AV / Input / RDS
 Top Menu	 D.Menu / Top
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause / Step / Freeze	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 >>I	 >>I / Preset+



