




 
 

 

 







Original	Substituto
Standby	Power
USB	SRC
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/10	0
10+	-/- / EPG
Time	P/C / FAV
SUB/MP3	MEDIA
Angle	Red (A)
Audio	Audio

Original	Substituto
Mute	MUTE
Menu	MENU
Setup	VOD
Up	UP
Down	DOWN
Left	LEFT
Right	RIGHT
Enter	OK
Title	TV/R
L/R	Green (B)
>>	Fast Forward
Play	Play
Pause	Pause
PBC	Yellow (C)
Stop	Stop
I<<	First





Original	Substituto
 >>	 Last
 Vol-	 VOL -
 Vol+	 VOL +
 V-MODE	 V-FOR
 Repeat	 TEXT
 N/P	 Blue (D)
 Clear	 EXIT
 Prog	 OPT+
 A-B	 Shift + VOD
 Zoom	 WIDE
 Slow	 CH +
 Random	 CH -
 Return	 BACK
 Display	 INFO
 Step	 Subt.

Original	Substituto

