



 
 
 
 
 
 
 

 

 

 

 

 

 
 
 
 
 
 
 

 
 




 

 

 

 
 
 

 

 


 


 

 

 
 
 

 

 

 





 
 
 
 
 
 





Original	Substituto	Original	Substituto
 Standby	 Power	 Vol-	 Vol -
 Auto	 Smart	 CH+	 Ch +
 Tv/Radio	 TV/R	 CH-	 Ch -
 Mute	 Mute	 Nicam/A2	 Options
 1	 1	 Aspect	 3D
 2	 2	 Display	 Info
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Menu	 Menu
 9	 9	 Exit	 Exit
 0	 0	 Source	 AV
 -/--	 Shift + Guide	 P.Mode	 Shift + Format
 Back	 Back	 S.Mode	 Shift + Dual
 Vol+	 Vol +	 Sleep	 Sleep





Original	Substituto
	Fav
	Fav-
	Fav+
	Hold
	EPG
	Text
	Lang
	Subtitle
	Index
	Reveal
	Subpage
	Media
	Size
	Play
	Pause
	<<
	>>

Original	Substituto
	Rec
	Stop
	I<<
	>>I
	Red
	Green
	Yellow
	Blue

