



Original	Substituto	Original	Substituto
	POWER		Power
	INFO		Info / Angle
	HDMI CONTROL		Smart / List
	SLEEP		Sleep / Timer
	SCREEN		Picture / Format
	SOURCE		AV / Input / RDS
	PRESETS		Setup / OPT /
	1		1
	2		2
	3		3
	ZOOM/RED/▲		Zoom / Size
	ZOOM/RED/▲		Shift + CH+ /
	ZOOM/RED/▲		Red / Netflix / Search
	4		4
	5		5
	6		6
	REPEAT/GREEN/▼		Shift + CH- / Page-
	REPEAT/GREEN/▼		Green / APP / Repeat
	7		7
	8		8
	9		9
	ROOT/YELLOW		Yellow / YouTube / Repeat
	RETURN		Back / Return
	0		0
	MENU		Menu / Home
	TITLE/BBLUE		Sound / Title
	TITLE/BBLUE		Blue / Prime Video / Random
	UP		Up
	LEFT		Left
	OK/SELECT		OK
	RIGHT		Right
	DOWN		Down
	P+		CH+ / Page+
	P-		CH- / Page-

Page-





Original	Substituto
	VOL
	VOL
	PC FAV MARKER
	LANG I/II
	EQ SUBTITLE
	DIMMER MUTE
	SHIFT + + RETURN
	GUIDE EPG
	TOP MENU D.MENU
	GOTO TEXT
	CLEAR EXIT
	MEDIA DISPLAY
	SHIFT + + ANGLE INFO
	SHIFT + + NETFLIX SEARCH
	REC MODE
	HOLD
	SLOW

Original	Substituto
	STEP - FREEZE
<< button"/>	TUNE-
>> button"/>	TUNE+
	PRESET-
>>I button"/>	PRESET+

