



Original	Substituto	Original	Substituto
Power	Power	Info	Info / Angle
Mute	Mute / Dimmer	EPG	Guide / EPG / -/-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Down	Down
6	6	Menu	Menu / Home
7	7	Exit	Exit / Cancel / Clear
8	8	Vol +	Vol+
9	9	P +	Shift + CH+ /
TV / R	TV/Radio /	CH +	CH+ / Page+
0	0	Vol -	Vol-
Home	Shift + Menu /	List	Smart / List
Fav	Fav / Marker / PC	CH -	CH- / Page-
Back	Back / Return	P -	Shift + CH- /
Audio	Audio / Lang I/II	OPT	Setup / OPT /

Original	Substituto	Original	Substituto
Power	Power	Info	Info / Angle
Mute	Mute / Dimmer	EPG	Guide / EPG / -/-
1	1	Up	Up
2	2	Left	Left
3	3	OK	OK
4	4	Right	Right
5	5	Down	Down
6	6	Menu	Menu / Home
7	7	Exit	Exit / Cancel / Clear
8	8	Vol +	Vol+
9	9	P +	Shift + CH+ /
TV / R	TV/Radio /	CH +	CH+ / Page+
0	0	Vol -	Vol-
Home	Shift + Menu /	List	Smart / List
Fav	Fav / Marker / PC	CH -	CH- / Page-
Back	Back / Return	P -	Shift + CH- /
Audio	Audio / Lang I/II	OPT	Setup / OPT /





Original	Substituto	Original	Substituto
 Text	 Text / Goto		
 Sub.	 Subtitle / EQ		
 Message	 Display / Media		
 Pause	 Pause / Step / Freeze		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Stop	 Stop / Hold		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

