



Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	<<		<< / Preset-
	>>		>>  / Preset+
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info / Angle
	EPG		Guide / EPG / -/-
	≡		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Exit		Exit / Cancel / Clear
	Smart		Smart / List
	←		Back / Return
	Vol+		Vol+
	P+		CH+ / Page+





Original	Substituto
	VOL Vol-
	SHIFT + HOME MENU Shift + Menu /
	CH PAGE CH- / Page-
	SHIFT + NETFLIX SEARCH Shift + Red / Netflix /
	SHIFT + YouTube REPEAT A-B Shift + Yellow / YouTube /
	NETFLIX SEARCH Red / Netflix / Search
	APP REPEAT Green / APP / Repeat
	YouTube REPEAT A-B Yellow / YouTube / Repeat
	Prime Video RANDOM Blue / Prime Video / Random
	LANG I/II AUDIO Audio / Lang I/II
	GOTO TEXT Text / Goto
	EQ SUBTITLE Subtitle / EQ

Original	Substituto

