

 

 

 


 


 


 

 

 




 

 



 




 






 


 





Original	Substituto	Original	Substituto
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 CH.List	 Smart / List	 Rec	 Rec / Rec Mode
 0	 0	 Timeshift	 Shift + Pause / Step /
 Recall	 Back / Return	 Timer	 Shift + Sleep / Timer
 Vol+	 Vol+	 Rec.List	 Shift + Smart / List
 PIC.Mode	 Picture / Format	 Red	 Red / Netflix / Search
 S.Mode	 Sound / Title	 Green	 Green / APP / Repeat

Original	Substituto	Original	Substituto
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			





Original	Substituto	Original	Substituto
	Yellow Yellow / YouTube / Repeat		Repeat
	Blue Blue / Prime Video / Random		Random
	Aspect Shift + Picture / Format		Format
	Tv/Radio TV/Radio /		TV/Radio /
	Sleep Sleep / Timer		Sleep / Timer
	Subtitle Subtitle / EQ		Subtitle / EQ
	Index Info / Angle		Info / Angle
	Reveal D.Menu / Top		D.Menu / Top
	Audio Audio / Lang I/II		Audio / Lang I/II
	Display Display / Media		Display / Media
	Text Text / Goto		Text / Goto
	Size Zoom / Size		Zoom / Size
	Play Play / Slow		Play / Slow
	Pause Pause / Step / Freeze		Pause / Step / Freeze
	Subpage Setup / OPT /		Setup / OPT /
	Stop Stop / Hold		Stop / Hold
	Hold Shift + Stop / Hold		Shift + Stop / Hold

Original	Substituto	Original	Substituto
	I <<		I << / Preset-
	>> I		>> I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

