

























 































 

 

 

 







Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	Recall		Back / Return
	TV / Radio		TV/Radio /
	Sub.T / TXT		Subtitle / EQ
	Sub.T / TXT		Text / Goto
	Func		D.Menu / Top
	A / V+		AV / Input / RDS
	EPG		Guide / EPG / -/-
	Option		Setup / OPT /
	Vol -		Vol-
	Vol +		Vol+
	IPTV		Sound / Title
	FAV / SAT		Fav / Marker / PC
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Red		Red / Netflix / Search
	Blue		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home





Original	Substituto	Original	Substituto
	Down		Down
	Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer
	PVR List		Smart / List
	PVR Info		Display / Media
	T.Shift		Eject / Surround
	<<		<< / Tune-
	>>		>> / Tune+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Jump		Picture / Format
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

