

 
 




 








 



Original	Substituto	Original	Substituto
 Power	 Power	 Display	 Display / Media
 Mute	 Mute / Dimmer	 TV / Radio	 TV/Radio /
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu / Home
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 Vol+	 Vol+
 -/--	 Shift + Guide / EPG / -/--	 Auto	 Eject / Surround
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 EPG	 Guide / EPG / -/--	 Aspect	 Zoom / Size
 Subtitle	 Subtitle / EQ	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Source	 AV / Input / RDS





Original		Substituto	
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Play/Pause / Text		Play / Slow
	Play/Pause / Text		Pause / Step / Freeze
	Play/Pause / Text		Text / Goto
	Stop / Index		Stop / Hold
	Mix		Smart / List
	Reveal		Setup / OPT /
	<< / Hold		<< / Tune-
	>> / Subpage		>> / Tune+
	<< / Size		<< / Preset-
	>> / Cancel		>> / Preset+
	TimeShift		D.Menu / Top
	Rec		Rec / Rec Mode
	FAV-		Shift + CH- /
	FAV+		Shift + CH+ /

Original		Substituto	
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

