



Original	Substituto
Standby	Power
AQT/Auto/Open/CI	Eject / Surround
P.Mode	Picture / Format
S.Mode	Sound / Title
List/Angle	Smart / List
Aspect	Shift + Picture / Format
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Back	Back / Return

Original	Substituto
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
Audio	Audio / Lang I/II
CH-	CH- / Page-
Sub-T	Subtitle / EQ
Menu	Menu / Home
[i+]/Info	Info / Angle
Input	AV / Input / RDS
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Exit	Exit / Cancel / Clear
DVD Setup	Shift + 2





Original	Substituto
Rec	REC MODE Rec / Rec Mode
Sleep	SLEEP Sleep / Timer
Red/D.Prog	Red / Netflix / Search
Tv/R	TV/Radio /
Green/Step	Green / APP / Repeat
Yellow/RPT	Yellow / YouTube / Repeat
Blue/A-B/SCR	Blue / Prime Video / Random
[=]/Slow	Shift + Play /
[=▲]/Stop	Shift + Up
[=▼]/Zoom	Shift + Down
[=i]/I<<	I<< / Preset-
Play	Play / Slow
[+]/Pause	Pause / Step / Freeze
[+]/>>I	>>I / Preset+
[=?]/<<	<< / Tune-
EPG/D.Menu	Guide / EPG / -/--
[=o]/>>	>> / Tune+

Original	Substituto
♥-/D.Disp	Shift + Guide / EPG / -/--
♥/D.Title	Fav / Marker / PC
♥+/D.Goto	Text / Goto

