 







 



 



 



 

 

 


 












 



















 

 

 

 





Original	Substituto	Original	Substituto
 Standby	 Power	 Recall/+10	 Back / Return
 Eject	 Eject / Surround	 FAV/Program	 Fav / Marker / PC
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 P.Mode	 Picture / Format	 Exit	 Exit / Cancel / Clear
 S.Mode	 Sound / Title	 Display	 Display / Media
 Sleep	 Sleep / Timer	 D.Setup	 Setup / OPT /
 Mute	 Mute / Dimmer	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Vol-	 Vol-
 6	 6	 Vol+	 Vol+
 7	 7	 CH-	 CH- / Page-
 8	 8	 CH+	 CH+ / Page+
 9	 9	 Red/Goto	 Red / Netflix / Search
 0/10	 0	 Green/A-B	 Green / APP / Repeat

Original	Substituto	Original	Substituto
 Recall/+10	 Back / Return	 Back / Return	 Fav / Marker / PC
 FAV/Program	 Fav / Marker / PC	 Menu / Home	 Exit / Cancel / Clear
 Menu	 Menu / Home	 Display / Media	 Setup / OPT /
 Exit	 Exit / Cancel / Clear	 Up	 Up
 Display	 Display / Media	 Left	 Left
 D.Setup	 Setup / OPT /	 OK	 OK
 Up	 Up	 Right	 Right
 Left	 Left	 Down	 Down
 OK	 OK	 Vol-	 Vol-
 Right	 Right	 Vol+	 Vol+
 Down	 Down	 CH-	 CH- / Page-
 Vol-	 Vol-	 CH+	 CH+ / Page+
 Vol+	 Vol+	 Red/Goto	 Red / Netflix / Search
 CH-	 CH- / Page-	 Green/A-B	 Green / APP / Repeat
 CH+	 CH+ / Page+		
 Red/Goto	 Red / Netflix / Search		
 Green/A-B	 Green / APP / Repeat		





Original	Substituto
ANGLE Yellow/Angle	YouTube Yellow / YouTube / Repeat
REPEAT Blue/Repeat	Prime Video REPEAT A-B Blue / Prime Video / Random
HOLD Play/Hold	SLOW Play / Slow
HOLD Pause	STEP-FREEZE Pause / Step / Freeze
REVEAL Stop/Reveal	HOLD Stop / Hold
ASPECT Size/Aspect	SIZE ZOOM Zoom / Size
SUBTITLE Subtitle	EQ SUBTITLE Subtitle / EQ
TEXT <<	TUNE- << / Tune-
TEXT Text	GOTO TEXT Text / Goto
SUBPAGE >>/Subpage	TUNE+ >> / Tune+
TITLE SCR/Title	SHIFT + TITLE SOUND Shift + Sound / Title
EPG Slow/EPG	GUIDE EPG Guide / EPG / -/-
INDEX I<</Index	PRESET- I<< / Preset-
MIX >>I/Mix	PRESET+ >>I / Preset+
D.MENU D.Menu	TOP MENU D.MENU D.Menu / Top
AUDIO I/II/Audio	LANG I/II AUDIO Audio / Lang I/II
MEDIA Media	SHIFT + MEDIA DISPLAY Shift + Display / Media

Original	Substituto
REC Rec	REC MODE Rec / Rec Mode
TIMESHIFT Timeshift	SHIFT + TIMER SLEEP Shift + Sleep / Timer
TV/RADIO Tv/Radio	PROGRAM TV/RADIO TV/Radio /

