




 

 



 

 

 

 



 







 


 
 


 



 
 


 



 

 

 

 

 


 
 
 
 
 
 







Original	Substituto	Original	Substituto
 Power	 Power	 Source	 AV
 Audio I/II	 Dual	 Info	 Info
 Mute	 Mute	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 Red	 Red
 0	 0	 Green	 Green
 Sleep	 Sleep	 Yellow	 Yellow
 Recall	 Back	 Blue	 Blue
 Exit	 Exit	 P.Mode	 Format
 Menu	 Menu	 S.Mode	 Shift + Dual





	Original	Substituto	Original	Substituto
	P.Size	 Eject		
	Subtitle	 Subt		
	Play/Pause / TS	 Play		
	Play/Pause / TS	 Pause		
	Stop	 Stop		
	Rec	 Rec		
	Text	 Text		
	<< / PVR List	 <<		
	<< / PVR List	 List		
	>> / DTV/Radio	 >>		
	>> / DTV/Radio	 TV/R		
	I<< / Fav.CH	 I<<		
	I<< / Fav.CH	 Pre Ch		
	>>I / Guide	 >>I		
	>>I / Guide	 Guide		

