





Original	Substituto	Original	Substituto
Standby	Power	Vol+	Vol+
AQT/Auto/Open/CI	Eject / Surround	Vol-	Vol-
P.Mode	Picture / Format	Mute	Mute / Dimmer
S.Mode	Sound / Title	Audio	Audio / Lang I/II
List/Angle	Smart / List	Sub-T	Subtitle / EQ
Aspect	Setup / OPT /	CH+	CH+ / Page+
1	1	CH-	CH- / Page-
2	2	Menu	Menu / Home
3	3	Info	Info / Angle
4	4	Input	AV / Input / RDS
5	5	DVD Setup/Exit	Exit / Cancel / Clear
6	6	Sleep	Sleep / Timer
7	7	Up	Up
8	8	Down	Down
9	9	Right	Right
0	0	Left	Left
Recall	Back / Return	OK	OK

Original	Substituto	Original	Substituto
Vol+	Vol+	Vol+	Vol+
Vol-	Vol-	Vol-	Vol-
Mute	Mute / Dimmer	Audio	Audio / Lang I/II
Sub-T	Subtitle / EQ	CH+	CH+ / Page+
CH+	CH+ / Page+	CH-	CH- / Page-
Menu	Menu / Home	Info	Info / Angle
Input	AV / Input / RDS	DVD Setup/Exit	Exit / Cancel / Clear
Sleep	Sleep / Timer	Up	Up
Down	Down	Right	Right
Left	Left	OK	OK





Original	Substituto	Original	Substituto
 Standby	 Power	 Vol+	 Vol+
 AQT/Auto/Open/CI	 Eject / Surround	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Mute	 Mute / Dimmer
 S.Mode	 Sound / Title	 Audio	 Audio / Lang I/II
 List/Angle	 Smart / List	 Sub-T	 Subtitle / EQ
 Aspect	 Setup / OPT /	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Info	 Info / Angle
 4	 4	 Input	 AV / Input / RDS
 5	 5	 DVD Setup/Exit	 Exit / Cancel / Clear
 6	 6	 Sleep	 Sleep / Timer
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Recall	 Back / Return	 OK	 OK





Original	Substituto
Rec	Rec / Rec Mode
Red/D.Prog/Tv/	Red / Netflix / Search
Green/Step	Green / APP / Repeat
Yellow/RPT	Yellow / YouTube / Repeat
Blue/A-B/SCR	Blue / Prime Video / Random
[=]/Slow	Text / Goto
[=▲]/Stop	Stop / Hold
[=▼]/Zoom	Zoom / Size
[=i]/I<<	I<< / Preset-
[=+]/Play/Pause	Play / Slow
[=♦]/>>I	>>I / Preset+
[=?]/<<<	<<< / Tune-
[=o]/>>>	>>> / Tune+
EPG/D.Menu	Guide / EPG / -/--
FAV/D.Title	Fav / Marker / PC
FAV+/D.Goto	+ CH+ /
FAV-/D.Disp	+ CH- /

Original	Substituto

