

 
 
 

 






 

 



 
 


 
 
 
 














	Original	Substituto		Original	Substituto
	Power		Power		Dev.List
	Mute		Mute		Video
	1		1		Subtitle
	2		2		Text
	3		3		Auto
	4		4		Menu
	5		5		Zoom
	6		6		Info
	7		7		Exit
	8		8		CH+
	9		9		CH-
	0		0		Up
	FAV		Pre Ch		Down
	Recall		Back		Right
	Lang		Dual		Left
	Time Shift		Smart		Enter
	Tv/Radio		TV/R		Vol+





Original	Substituto	Original	Substituto
	VOL - Vol -		
	APP MEDIA Media		
	REC MODE Rec		
	Stop		
	PLAY MODE Play		
	Pause		
	<<		
	>>		
	I<<		
	>>I		
	Red/FAV/Daily A Red		
	Green/DEL/Weekl B Green		
	Yellow/Movie/P.Inf C Yellow		
	Blue/Lock/Timer D Blue		

