





































 

Original	Substituto
 Power	 Power
 Energy	 Display / Media
 Picture	 Picture / Format
 Sound	 Sound / Title
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 16:9/4:3	 Shift + Zoom /
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Substituto
 9	 9
 TTX	 Text / Goto
 0	 0
 Recall	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Info	 Info / Angle
 Vol+	 Vol+
 Home	 Shift + Menu /
 EPG/Hold	 Guide / EPG / -/-
 CH+	 CH+ / Page+





Original	Substituto
 Vol-	 Vol-
 FAV List	 Fav / Marker / PC
 Size	 Zoom / Size
 Play	 Smart / List
 CH-	 CH- / Page-
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 Tv Pause	 Pause / Step / Freeze
 Goto	 Shift + Text /
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Substituto
 Blue	 Blue / Prime Video / Random

