












 





 




































 





 
 

 




Original	Substituto	Original	Substituto
On/Off	 Power	On/Tim	 Setup / OPT /
Mute	 Mute / Dimmer	Text	 Text / Goto
Still	 Pause / Step / Freeze	TV/AV	 AV / Input / RDS
Txt Stop	 Stop / Hold	Menu	 Menu / Home
Tune-	 << / Tune-	Menu Up	 Up
Tune+	 >> / Tune+	Info	 Info / Angle
Contrast-	 I<< / Preset-	Menu Left	 Left
Contrast+	 >>I / Preset+	OK Enter	 OK
Color- S.Std	 Sound / Title	Menu Right	 Right
Menu audio	 Audio / Lang I/II	Menu Off	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Surround	 Eject / Surround	Swap	 Back / Return
Color+ P.Std	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	View	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Menu video	 D.Menu / Top	Display	 Display / Media



Original	Substituto	Original	Substituto
Chan.Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

Original	Substituto	Original	Substituto
Tone-	 Shift + << /		
Tone+	 Shift + >> /		
Bright- Sys	 Shift + I<< / Preset-		
Bright+ Mode	 Shift + >>I / Preset+		
Nicam/Mono	 Shift + Audio / Lang I/II		
4.# 16:9	 Shift + Picture / Format		
Aft/Caf	 Shift + TV/Radio / Program		
Off/Tim	 Shift + Setup / OPT / Tools		
Mix Scan	 Shift + Text /		
Game Coo	 Shift + AV / Input / RDS		
Store Text	 Shift + Menu /		
Browse	 Shift + Info / Angle		
Level L	 Shift + Left		
On Pip	 Shift + OK		
Level R/Woofers	 Shift + Right		
Back	 Shift + Back / Return		
Audio+	 Shift + Vol+		



Original	Substituto	Original	Substituto
Update	+  Shift + CH+ /		
Audio-	+  Shift + Vol-		
Disp	+  Shift + Display / Media		
Reveal	+  Shift + CH- /		
3.*	+  Shift + 3		
Search	+  Shift + Red / Netflix /		

