



Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	Power		Power
	PP		Back / Return
	I /		Audio / Lang I / II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Fav / Marker / PC
	P<P		Display / Media
	Menu		Menu / Home

Original	Substituto	Original	Substituto
	Info		Info / Angle
	Left		Left
	P +		Shift + CH+ /
	P +		CH+ / Page+
	Right		Right
	P -		Shift + CH /
	P -		CH / Page-
	Vol -		Vol -
	Vol +		Vol +
	Red / Sound		Red / Netflix / Search
	Green / Picture		Green / APP / Repeat
	Yellow / Feature		Yellow / YouTube / Repeat
	Blue / Install		Blue / Prime Video / Random
	TV		TV/Radio /
	AV		AV / Input / RDS
	Text		Text / Got o
	M x		Shift + Text / Got o



