


 

 

 

 


 





 








 
 



 






 



 


 

 
 
 
 


 
 


 

 









Original	Substituto	Original	Substituto
 Standby CD	 Power	 V-CD/LD	 3D
 1 CD	 1	 CD	 Yellow
 2 CD	 2	 Volume+	 Vol +
 3 CD	 3	 Volume-	 Vol -
 4 CD	 4	 Mute	 Mute
 5 CD	 5	 Display CD	 Info
 6 CD	 6	 Sleep	 Sleep
 7 CD	 7	 Dolby Pro Logic	 Options
 8 CD	 8	 3 Stereo	 Dual
 9 CD	 9	 Hall	 Subt
 0 CD	 0	 Center Mode	 Ok
 DCC	 Blue	 Test Tone	 AV
 VCR1	 Red	 Delay	 Format
 VCR 2	 Green	 Center Up	 Up
 TV	 TV/R	 Center Down	 Down
 Tape	 Smart	 Rear Up	 Right
 Tuner	 Media	 Rear Down	 Left







 
 

 







 
 



 


 



 
 



 
 






 



 
 


 
 


 
 


 










 


Original	Substituto
 Pause/Cancel	 Pause
 <</Tuning Down/Page- CD	 <<
 >>/Tuning Up/Page+ CD	 >>
 Play/Enlarge CD	 Play
 Stop/Hold CD	 Stop
 >>I/Preset/CH+	 >>I
 I<</Preset/CH-	 I<<
 Surr.Off	 Back
 Disc Up/Deck A	 Ch +
 Disc Down/Deck B	 Ch -
 Standby Tv	 Shift + Power
 Tv-Vol Up	 Shift + Vol +
 Tv-Vol Down	 Shift + Vol -
 1 Tv	 Shift + 1
 2 Tv	 Shift + 2
 3 Tv	 Shift + 3
 4 Tv	 Shift + 4

Original	Substituto
 5 Tv	 Shift + 5
 6 Tv	 Shift + 6
 7 Tv	 Shift + 7
 8 Tv	 Shift + 8
 9 Tv	 Shift + 9
 0 Tv	 Shift + 0
 -/--/Mono/ST Tv	 Guide
 TXT Tv	 Text
 Mute Tv	 Shift + Mute
 Display Tv	 Shift + Info
 Play/Enlarge Tv	 Shift + Play
 I<</Preset/CH Down TV	 Shift + I<<
 >>I/Preset/CH Up	 Shift + >>I
 Stop/Hold Tv	 Shift + Stop
 Pause/Cancel	 Shift + Pause
 <</Tuning Down/Page - Tv	 Shift + <<
 >>/Tuning Up/Page+ Tv	 Shift + >>

 








 


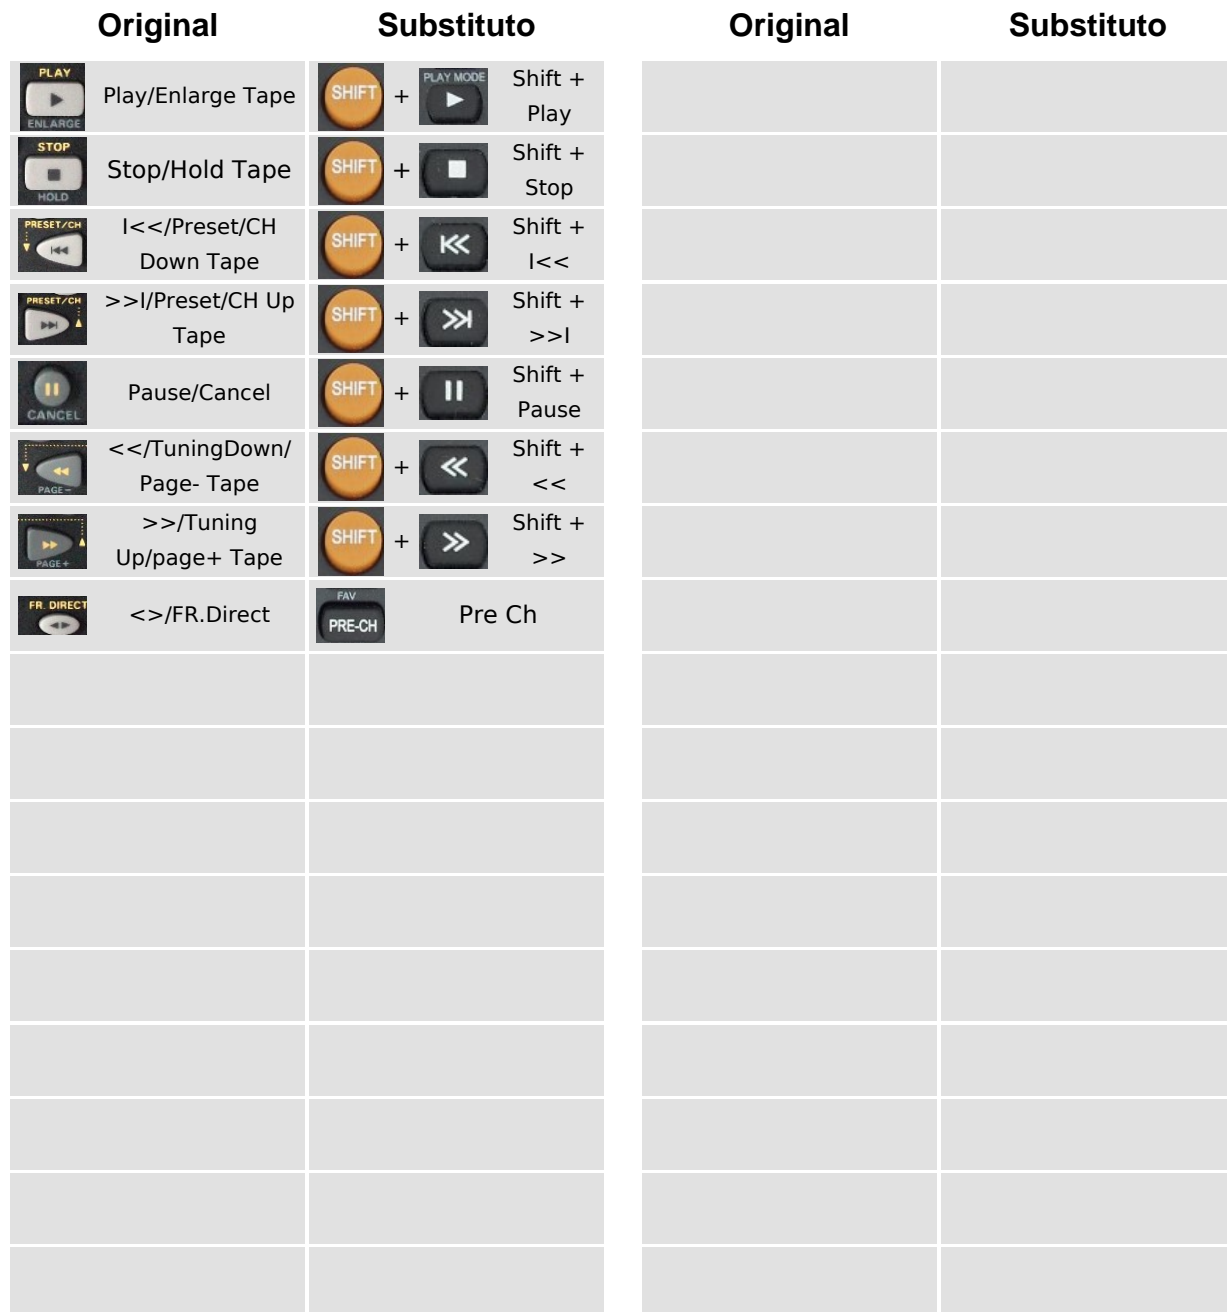 








 



 


 
 






 
 


 
 
 

 
 
 

 
 
 

 



 
 
 

 
 
 

 
 
 

 
 


 
 
 
Original	Substituto	Original	Substituto
 Standby VCR 1	 Power	 9 VCR 1	 9
 VCR 1	 Red	 0 VCR 1	 0
 VCR 2	 Green	 -/--/Mono/ST VCR	 Guide
 CD	 Yellow	 Volume+	 Vol +
 DCC	 Blue	 Volume-	 Vol -
 TV	 TV/R	 Mute	 Mute
 Tape	 Smart	 Sleep	 Sleep
 Tuner	 Media	 Play/Enlarge VCR	 Play
 V-CD/LD	 3D	 Stop/Hold VCR	 Stop
 1 VCR 1	 1	 I<</Preset/CH Down VCR 1	 I<<
 2 VCR 1	 2	 >>I/Preset/CH Up VCR 1	 >>I
 3 VCR 1	 3	 <</Tuning Down/Page- VCR	 <<
 4 VCR 1	 4	 >>/Tuning Up/Page+ VCR 1	 >>
 5 VCR 1	 5	 Pause/Cancel VCR	 Pause
 6 VCR 1	 6	 Standby Tape	 Shift + Power
 7 VCR 1	 7	 Disc Up/Deck A	 Ch +
 8 VCR 1	 8	 Disc Down/Deck B Tape	 Ch -









 






 





 


 
 

 



 





 
 





 

 





 

 

 

 
 
 

 

 
 


 
 






Original	Substituto	Original	Substituto
 Standby DCC	 Power	 9 DCC	 9
 VCR 1	 Red	 0 DCC	 0
 VCR 2	 Green	 Disc Up/Deck A	 Ch +
 CD	 Yellow	 Disc Down/Deck B DCC	 Ch -
 DCC	 Blue	 Volume+	 Vol +
 TV	 TV/R	 Volume-	 Vol -
 Tape	 Smart	 Mute	 Mute
 Tuner	 Media	 Sleep	 Sleep
 V-CD/LD	 3D	 <>/FR.Direct DCC	 Pre Ch
 1 DCC	 1	 Display DCC	 Info
 2 DCC	 2	 Play/Enlarge DCC	 Play
 3 DCC	 3	 Stop/Hold DCC	 Stop
 4 DCC	 4	 >>/Preset/CH Up DCC	 >>I
 5 DCC	 5	 I<</Preset/CH Down DCC	 I<<
 6 DCC	 6	 Pause/Cancel DCC	 Pause
 7 DCC	 7	 <</Tuning Down/Page- DCC	 <<
 8 DCC	 8	 >>/Tuning Up/Page+ DCC	 >>



[illegible]





Original	Substituto	Original	Substituto
 Standby	 Power	 9 V-CD/LD	 9
 CD	 Yellow	 0 V-CD/LD	 0
 DCC	 Blue	 Volume+	 Vol +
 VCR1	 Red	 Volume-	 Vol -
 VCR2	 Green	 Mute	 Mute
 TV	 TV/R	 Sleep	 Sleep
 Tape	 Smart	 Play/Enlarge V-CD/LD	 Play
 Tuner	 Media	 Stop/Hold	 Stop
 V-CD/LD	 3D	 <</Tuning Down/Page-	 <<
 1 V-CD/LD	 1	 I<</Preset/CH Down V-CD/LD	 I<<
 2 V-CD/LD	 2	 >>I/Preset/CH Up V-CD/LD	 >>I
 3 V-CD/LD	 3	 >>/Tuning Up/Page+	 >>
 4 V-CD/LD	 4	 Pause/Cancel V-CD/LD	 Pause
 5 V-CD/LD	 5	 Display V-CD/LD	 Info
 6 V-CD/LD	 6	 Disc Up/Deck A V-CD/LD	 Ch +
 7 V-CD/LD	 7	 Disc Down/Deck B V-CD	 Ch -
 8 V-CD/LD	 8	 Standby Tuner	 Shift + Power



