




 
 














 
 

 

 
 



















 



 







 



 





 



 











Original	Substituto	Original	Substituto
	Standby	 + 	Shift + Power
	On		Power
	HDMI	 + 	Shift + 0
	Zone A		Sound / Title
	Zone B		Audio / Lang I/II
	A/D		Red / Netflix / Search
	ATT		Green / APP / Repeat
	SPKR A-B		Yellow / YouTube / Repeat
	7.1		Blue / Prime Video / Random
	BD	 + 	Shift + 5
	DVD	 + 	Shift + 2
	VCR	 + 	Shift + 4
	DSS	 + 	Shift + 9
	TV	 + 	Shift + 1
	CD	 + 	Shift + 3
	CDR	 + 	Shift + Fav / Marker / PC
	AUX	 + 	Shift + 7
	Tune	 + 	Shift + 6
	USB	 + 	Shift + 8
	M-XP	 + 	Shift + Guide / EPG / -/--
	Input Up		CH+ / Page+
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Input Down		CH- / Page-
	Display		Display / Media
	Surr		Eject / Surround
	Volume-		Vol-
	Top		Smart / List
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right



 







 



 

 

 

 

 



 

 

 

 

 

 



 



 





 

 

 





 

 

 



 



Original	Substituto
	Menu / Home
	Down
	Exit / Cancel / Clear
	Guide / EPG / -/--
	1
	2
	3
	Sleep / Timer
	4
	5
	6
	Subtitle / EQ
	7
	8
	Text / Goto
	0
	9

Original	Substituto
	I<< / Preset-
	>>I / Preset+
	Shift + CH- /
	<< / Tune-
	Shift + CH+ /
	>> / Tune+

 

 





 



 





 

 















 





 

 



 

 

 

 

 





Original	Substituto	Original	Substituto
	Power		Power
	Setup		Setup / OPT /
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Volume-		Vol-
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Memo		Smart / List
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8
	9		9
	CLR		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/-





Original	Substituto	Original	Substituto
 Power	 Power	 2	 2
 Mute	 Mute / Dimmer	 3	 3
 Volume+	 Vol+	 4	 4
 Display	 Display / Media	 5	 5
 Volume-	 Vol-	 6	 6
 Tune+	 >> / Tune+	 7	 7
 Info	 Info / Angle	 8	 8
 Preset-	 I<< / Preset-	 9	 9
 Enter	 OK	 CLR	 Exit / Cancel / Clear
 Preset+	 >>I / Preset+	 0	 0
 Menu	 Menu / Home	 CAT-	 CH- / Page-
 Tune-	 << / Tune-	 CAT+	 CH+ / Page+
 Memo	 Smart / List		
 T.Mode	 Text / Goto		
 P.Scan	 D.Menu / Top		
 Band	 Setup / OPT /		
 1	 1		

