






 




















 




 

























Original	Substituto
 TV	 Shift + 1
 AV.SV	 AV / Input / RDS
 SCART1	 Shift + 3
 PC	 Shift + Fav / Marker / PC
 SCART2	 Shift + 2
 Mute	 Mute / Dimmer
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 Menu / Enter	 OK
 Menu / Enter	 Menu / Home
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Down / P-	 Down
 Down / P-	 CH- / Page-

Original	Substituto
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Green	 Green / APP / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +100	 Guide / EPG / -/--
 0	 0
 RTN	 Back / Return





Original	Substituto
	Fav / Marker / PC
	Sound / Title
	+ Shift + Up
	Display / Media
	+ Shift + Left
	+ Shift + OK
	+ Shift + Right
	D.Menu / Top
	+ Shift + Down
	Setup / OPT /
	Stop / Hold
	Play / Slow
	>> / Tune+
	Pause / Step / Freeze
	<< / Preset-
	<< / Tune-
	Sleep / Timer

Original	Substituto
	Smart / List
	Power

