







 

 


 





 





 
 


 
 


 


 
 

 
 




 

 
 


 


 
 









Original	Substituto	Original	Substituto
 Power	 Power	 Right/[≡o]	 Right
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Left/[≡+]	 Left
 4	 4	 Menu	 Menu
 5	 5	 Mute	 Mute
 6	 6	 Recall/[≡?]	 Pre Ch
 7	 7	 Sleep/[≡◆]	 Sleep
 8	 8	 Red/Skip	 Red
 9	 9	 Green/Movie	 Green
 0	 0	 Yellow/Delete	 Yellow
 Source/[≡]	 AV	 Blue/Mode	 Blue
 Normal/OK/[≡i]	 OK	 [≡]	 Text
 PR+	 Ch +	 [≡x]	 TV/R
 Up	 Up		
 Down	 Down		
 PR-	 Ch -		

Original	Substituto	Original	Substituto
 MUTE	 MUTE	 Right	 Right
 TV	 AUX	 Vol +	 Vol +
 DVD	 SAT	 Vol -	 Vol -
 SAT	 AUX	 Left	 Left
 AUX	 MUTE	 Menu	 Menu
 TV	 MUTE	 Mute	 Mute
 DVD	 PRE-CH	 Recall/[≡?]	 Pre Ch
 SAT	 SLEEP	 Sleep/[≡◆]	 Sleep
 AUX	 Red	 Red/Skip	 Red
 TV	 Green	 Green/Movie	 Green
 DVD	 Yellow	 Yellow/Delete	 Yellow
 SAT	 Blue	 Blue/Mode	 Blue
 AUX	 REPEAT	 [≡]	 Text
 TV	 TEXT	 [≡x]	 TV/R
 DVD			
 SAT			
 AUX			
 TV			
 DVD			
 SAT			
 AUX			
 TV			
 DVD			
 SAT			
 AUX			
 TV			
 DVD			
 SAT			
 AUX			
 TV			
 DVD			
 SAT			
 AUX			

