 


 
 





Original	Substituto	Original	Substituto
 Power	 Power	 Red	 Red / Netflix / Search
 <<	 << / Tune-	 Vol+	 Vol+
 Play/Archiv	 Play / Slow	 P+	 CH+ / Page+
 >>	 >> / Tune+	 Green	 Green / APP / Repeat
 Rec	 Rec / Rec Mode	 Up	 Up
 Pause/Timeshift	 Pause / Step / Freeze	 Yellow	 Yellow / YouTube / Repeat
 Stop	 Stop / Hold	 Left	 Left
 1	 1	 OK	 OK
 2	 2	 Right	 Right
 3	 3	 Blue	 Blue / Prime Video / Random
 4	 4	 Down	 Down
 5	 5	 White/F	 Info / Angle
 6	 6	 Vol-	 Vol-
 7	 7	 P-	 CH- / Page-
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 Back	 Back / Return
 0/Input	 0	 Exit	 Exit / Cancel / Clear





Original	Substituto	Original	Substituto
 Text	 Text / Goto		
 EPG	 Guide / EPG / -/--		
 Home	 Menu / Home		

