




 





 





 



 



















 






 




 

 














Original	Substituto	Original	Substituto
 Power	 Power	 TV	 TV/R
 1	 1	 AV	 AV
 2	 2	 Up / P+	 Up
 3	 3	 Up / P+	 Ch +
 4	 4	 Down / P-	 Down
 5	 5	 Down / P-	 Ch -
 6	 6	 Right / V+	 Right
 7	 7	 Right / V+	 Vol +
 8	 8	 Left / V-	 Left
 9	 9	 Left / V-	 Vol -
 0	 0	 Menu	 Menu
 Mute	 Mute	 Menu	 Ok
 16:9	 Format	 S / M / D	 Smart
 Red	 Red	 Recall	 Pre Ch
 Green	 Green	 Recall	 Back
 Yellow	 Yellow	 ≡	 Text
 Blue	 Blue	 /≡	 Options

Original	Substituto	Original	Substituto
 MUTE	 MUTE	 TV	 AUX
 TV	 DVD	 TV	 SAT
 TV	 SAT	 TV	 AUX
 TV	 AUX	 TV	 AUX
 TV	 AUX	 TV	 AUX
 TV	 AUX	 TV	 AUX
 TV	 AUX	 TV	 AUX
 TV	 AUX	 TV	 AUX
 TV	 AUX	 TV	 AUX



