







 

 


 





 




 

 
 


 
 


 


 
 

 
 




 

 
 


 


 
 









Original	Substituto	Original	Substituto
 Power	 Power	 Right/[≡o]	 Right
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Left/[≡+]	 Left
 4	 4	 Menu	 Menu
 5	 5	 Mute	 Mute
 6	 6	 Recall/[≡?]	 Pre Ch
 7	 7	 Sleep/[≡◇]	 Sleep
 8	 8	 Red/Skip	 Red
 9	 9	 Green/Movie	 Green
 0	 0	 Yellow/Delete	 Yellow
 Source/[≡]	 AV	 Blue/Mode	 Blue
 Normal/OK/[≡i]	 OK	 [≡]	 Text
 PR+	 Ch +	 [≡x]	 TV/R
 Up	 Up		
 Down	 Down		
 PR-	 Ch -		

Original	Substituto	Original	Substituto
 MUTE	 SHIFT	 TV	 AUX
 DVD	 SAT	 PLAY MODE	 REC MODE
 SLEEP	 SLEEP	 DISC NAV	 SETTINGS
 D.MENU	 TEXT	 LIST	 OPT
 TOP MENU	 INFO	 SOUND	 AD
 MENU	 OK	 SEARCH	 PICTURE
 EXIT	 BACK	 E-MANUAL	 TIMER
 VOL+	 HOME	 REPEAT	 AV
 VOL-	 SMART	 D.MENU	 AV
 1	 CH+	 D.MENU	 AV
 2	 APP	 D.MENU	 AV
 3	 MEDIA	 D.MENU	 AV
 4	 CH-	 D.MENU	 AV
 5	 GUIDE	 D.MENU	 AV
 6	 0	 D.MENU	 AV
 7	 PRE-CH	 D.MENU	 AV
8	A	D.MENU	AV
9	B	D.MENU	AV
0	C	D.MENU	AV
A	D	D.MENU	AV
B		D.MENU	AV
C		D.MENU	AV
D		D.MENU	AV

