






 




































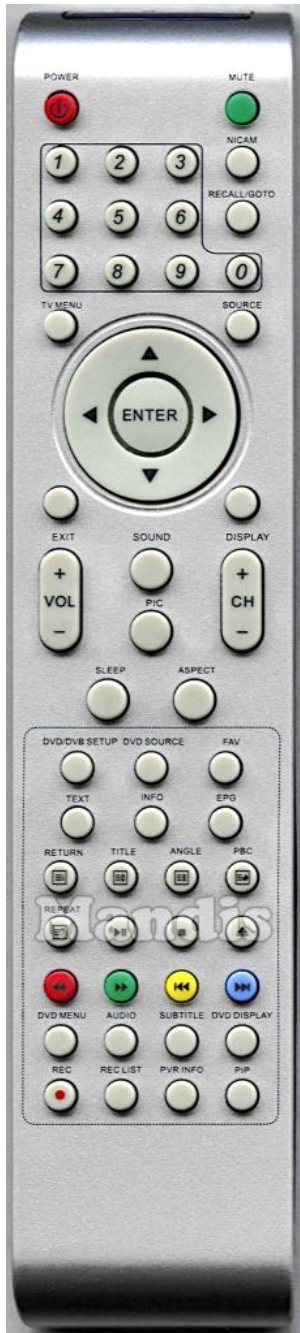 

 


Original	Substituto	Original	Substituto
 Power	 Power	 Source	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Left	 Left
 1	 1	 Enter	 OK
 2	 2	 Right	 Right
 3	 3	 Exit	 Exit / Cancel / Clear
 Nicam	 Shift + Audio / Lang I/II	 Down	 Down
 4	 4	 Display	 Display / Media
 5	 5	 Vol+	 Vol+
 6	 6	 Sound	 Sound / Title
 Recall/Goto	 Back / Return	 CH+	 CH+ / Page+
 Recall/Goto	 Shift + Text /	 Vol-	 Vol-
 7	 7	 Pic	 Picture / Format
 8	 8	 CH-	 CH- / Page-
 9	 9	 Sleep	 Sleep / Timer
 0	 0	 Aspect	 Shift + Picture / Format
 TV Menu	 Menu / Home	 DVD/DVB Setup	 Setup / OPT /
 Up	 Up	 DVD Source	 Shift + AV / Input / RDS

Original	Substituto	Original	Substituto
 Power	 Mute / Dimmer	 Shift	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 ZOOM	 SLEEP	 TV RADIO
 TOP MENU	 OPT-TOOLS	 GOTO	 RDS
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	 BACK
 CLEAR	 EXIT	 CANCEL	
 LIST	 SMART	 MEDIA	 CH PAGE
 VOL +	 DISPLAY	 TV	 DVD
 VOL -	 CH PAGE	 CD - STB	
 TV	 VIDEO	 1	 TAPE
 DVD	 AUX - HDD	 2	 TUNER
 CD - STB	 USB	 3	
 1	 BLUETOOTH	 4	 5
 2	 HDMI - BAT	 6	 6
 3	 7	 7	 7
 4	 8	 8	 8
5	9	9	9
6	0	0	0
7	GUIDE EPG	GUIDE EPG	FAV MARKER
8	NETFLIX	APP	YouTube
9	SEARCH	REPEAT	REPEAT A-B
0	RANDOM	RANDOM	





Original	Substituto
	Fav  Fav / Marker / PC
	Text  Text / Goto
	Info  Info / Angle
	EPG  Guide / EPG / -/--
	Return / Index  Shift + Back / Return
	Title / Size  Shift + Sound / Title
	Title / Size  Zoom / Size
	Angle / Hold  Shift + Stop /
	PBC / Subcode  TV/Radio /
	Repeat / Reveal  Shift + Green / APP /
	Play/Pause  Play / Slow
	Stop  Stop / Hold
	Open/Close  Eject / Surround
	Red / <<  << / Tune-
	Red / <<<  Red / Netflix / Search
	Green / >>>  >> / Tune+
	Green / >>>  Green / APP / Repeat

Original	Substituto
	Yellow / I<<<  I<<< / Preset-
	Yellow / I<<<  Yellow / YouTube / Repeat
	Blue / >>>I  >>>I / Preset+
	Blue / >>>I  Blue / Prime Video / Random
	DVD Menu  D.Menu / Top
	Audio  Audio / Lang I/II
	Subtitle  Subtitle / EQ
	DVD Display  Shift + Display / Media
	Rec  Rec / Rec Mode
	Rec List  Smart / List
	PVR Info  Shift + Info / Angle
	PIP  Shift + Smart / List

