


















 



















 































 






Original	Substituto	Original	Substituto
 Power	 Power	 9	 9
 EPG	 Guide / EPG / -/--	 Zoom	 Zoom / Size
 Teletext	 Text / Goto	 0	 0
 Select	 Smart / List	 Goto	 Shift + Text /
 Confirm	 D.Menu / Top	 i/Display	 Display / Media
 Title	 Sound / Title	 Guide	 Shift + Guide / EPG / -/--
 Eject	 Eject / Surround	 Up	 Up
 Menu	 Menu / Home	 Left	 Left
 Option	 Shift + Setup / OPT / Tools	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Rec	 Rec / Rec Mode
 3	 3	 Down	 Down
 4	 4	 Return	 Back / Return
 5	 5	 Vol-	 Vol-
 6	 6	 Vol+	 Vol+
 7	 7	 <<	 << / Tune-
 8	 8	 Stop	 Stop / Hold

Original	Substituto	Original	Substituto
 9	 9	 9	 9
 Zoom	 Zoom / Size	 Zoom	 Zoom / Size
 0	 0	 0	 0
 Goto	 Shift + Text /	 Goto	 Shift + Text /
 i/Display	 Display / Media	 i/Display	 Display / Media
 Guide	 Shift + Guide / EPG / -/--	 Guide	 Shift + Guide / EPG / -/--
 Up	 Up	 Up	 Up
 Left	 Left	 Left	 Left
 OK	 OK	 OK	 OK
 Right	 Right	 Right	 Right
 Rec	 Rec / Rec Mode	 Rec	 Rec / Rec Mode
 Down	 Down	 Down	 Down
 Return	 Back / Return	 Return	 Back / Return
 Vol-	 Vol-	 Vol-	 Vol-
 Vol+	 Vol+	 Vol+	 Vol+
 <<	 << / Tune-	 <<	 << / Tune-
 Stop	 Stop / Hold	 Stop	 Stop / Hold





Original	Substituto
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
I>/Slow	Info / Angle
Pausue/Step	Pause / Step / Freeze
>>I	>>I / Preset+
Source	AV / Input / RDS
Time Shift	Picture / Format
Repeat	Shift + Green / APP / REPEAT
aA/Subtitle	Subtitle / EQ
Setup	Setup / OPT /
Red	Red / Netflix / Search
Tv System	TV/Radio /
Green	Green / APP / Repeat
Audio	Audio / Lang I/II
Yellow	Yellow / YouTube / Repeat
Mute	Mute / Dimmer

Original	Substituto
Blue	Blue / Prime Video / Random

