



Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Shift + Smart / List
	Recall		Back / Return
	FAV		Fav / Marker / PC
	Subtitle		Subtitle / EQ
	Info		Info / Angle
	TTX		Text / Goto

Original	Substituto	Original	Substituto
	Vol+		Vol+
	Vol-		Vol-
	Page+		Shift + CH+ /
	Page-		Shift + CH- /
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Lang		Audio / Lang I/II
	Timeshift		Smart / List
	Tv/Radio		TV/Radio /
	EPG		Guide / EPG / -/-
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		OK
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear





Original	Substituto
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Play	Play / Slow
Pause	Pause / Step / Freeze
>>	>> / Preset+
Rec	Rec / Rec Mode
<<	<< / Tune-
>>	>> / Tune+
<<	<< / Preset-
Stop	Stop / Hold
Timer	Sleep / Timer
PVR	AV / Input / RDS
V-Format	Shift + 4
Aspect	Picture / Format

Original	Substituto

