


 

 

 
 
 
 



 


 
 
 
 

 

 
 
 
 

 
 
 



 





 



 


 


 

 
 
 

 
 


 










Original	Substituto	Original	Substituto
 Power	 Power	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 P+	 Ch +
 7	 7	 P-	 Ch -
 8	 8	 Mute	 Mute
 9	 9	 i	 Info
 0	 0	 EXIT	 Exit
 ↔	 FAV PRE-CH	 Source	 AV
 BACK	 RETURN BACK	 Q. MENU	 E-MANUAL D.MENU
 MENU	 TOP MENU MENU	 EPG	 - / - / GUIDE
 NETFLIX	 APP MEDIA	 TXT	 REPEAT TEXT
 Internet	 HOME SMART	 *	 PICTURE FORMAT
 OK	 OK	 */Q	 ECO 3D





Original	Substituto	Original	Substituto
 [>]	 Options		
 Lang	 Dual		
 Subt.	 Subt		
 Shift + Format	 Shift + Format		
 TV	 TV/R		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		

