 

 


 
 
 

 
 


 





 






Original	Substituto	Original	Substituto
 Power	 Power	 Menu	 Menu
 Mute	 Mute	 Info	 Info
 Source	 AV	 Exit	 Exit
 P.Mode	 3D	 FAV.CH	 Pre Ch
 S.Mode	 Shift + Dual	 Sleep	 Sleep
 Audio/I-II	 Dual	 Jump	 Options
 P.Size	 Format	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Red/D.Setup	 Red
 0	 0	 Green/Repeat	 Green

Original	Substituto	Original	Substituto
 Menu	 Menu	 Info	 Info
 Exit	 Exit	 FAV.CH	 Pre Ch
 Sleep	 Sleep	 Jump	 Options
 Up	 Up	 Down	 Down
 Right	 Right	 Left	 Left
 OK	 Ok	 Vol+	 Vol +
 Vol-	 Vol -	 P+	 Ch +
 P-	 Ch -	 Red/D.Setup	 Red
 Green/Repeat	 Green		





	Original	Substituto		Original	Substituto
	Yellow/zoom		Yellow		
	Blue/Goto		Blue		
	PVR List		List		
	Time Shift		Smart		
	USB/SD		Media		
	DTV/Radio		TV/R		
	DVD Menu		D. Menu		
	Text		Text		
	Subtitle		Subt		
	Guide		Guide		
	Rec		Rec		
	Stop		Stop		
	Play		Play		
	Pause		Pause		
	Open/Close		Eject		
	<<		<<		
	>>		>>		

	Original	Substituto
	<<	
	>>	

