



| Original | Substituto | Original | Substituto |
|---|------------|---|----------------------------|
|  | Standby |  | Power |
|  | Auto |  | Smart / List |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  | Shift + Guide / EPG / -/-- |
|  | Recall |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | Aspect |  | Shift + Picture / Format |
|  | Nicam |  | Audio / Lang I/II |
|  | Display |  | Display / Media |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | LCD Menu |  | Menu / Home |
|  | Exit |  | Exit / Cancel / Clear |
|  | Input |  | AV / Input / RDS |
|  | PMode |  | Picture / Format |
|  | SMode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | Fav |  | Fav / Marker / PC |





| | Original | Substituto | Original | Substituto |
|---|----------|---|----------|------------|
|  | Fav- |  << / Preset- | | |
|  | EPG |  Guide / EPG / /-- | | |
|  | Text |  Text / Goto | | |
|  | Fav+ |  >> / Preset+ | | |
|  | Hold |  Stop / Hold | | |
|  | Lang |  Shift + Audio / Lang I/II | | |
|  | Subtitle |  Subtitle / EQ | | |
|  | Index |  Info / Angle | | |
|  | Size |  Zoom / Size | | |
|  | Reveal |  TV/Radio / | | |
|  | Subpage |  Eject / Surround | | |
|  | Red |  Red / Netflix / Search | | |
|  | Green |  Green / APP / Repeat | | |
|  | Yellow |  Yellow / YouTube / Repeat | | |
|  | Blue |  Blue / Prime Video / Random | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

