







 





























Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	PPV		TV/Radio /
	Opciones		Setup / OPT /
	Video Club		Subtitle / EQ
	Menu		Menu / Home
	Guia		Guide / EPG / -/-
	Idiomas		Audio / Lang I/II
	Herramientas		Smart / List
	Tv/Salir		Exit / Cancel / Clear
	?/Ayuda		Fav / Marker / PC
	Atras		Back / Return
	B.		Display / Media
	Info		Info / Angle
	Vol+		Vol+
	Up		Up
	PRG+		CH+ / Page+

Original	Substituto	Original	Substituto
	Vol-		Vol-
	<<		<< / Tune-
	Left		Left
	OK		OK
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Right		Right
	>>		>> / Tune+
	PRG-		CH- / Page-
	Down		Down
	Stop		Stop / Hold
	Red		Red / Netflix / Search
	Gray		Zoom / Size
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1





Original	Substituto	Original	Substituto
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

