



Original	Substituto	Original	Substituto
 Power	 Power	 9	 9
 Input	 AV / Input / RDS	 Page-	 CH- / Page-
 Open	 Eject / Surround	 Clear	 Exit / Cancel / Clear
 Pure Audio	 Sound / Title	 0	 0
 Vol-	 Vol-	 Goto	 Text / Goto
 Vol+	 Vol+	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 Top Menu	 D.Menu / Top
 1	 1	 Up	 Up
 2	 2	 Pop-Up Menu	 Shift + Menu /
 3	 3	 Left	 Left
 Home	 Menu / Home	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Option	 Shift + Setup / OPT / Tools
 6	 6	 Down	 Down
 Page+	 CH+ / Page+	 Return	 Back / Return
 7	 7	 Red	 Red / Netflix / Search
 8	 8	 Green	 Green / APP / Repeat



