


 
 

















 

















 
 




 
 
 

 
 
 
 
 
 
 
 
 
 




 





 





Original	Substituto	Original	Substituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/Multivideo		0
	Tv/Radio		TV/R
	Mute		Mute
	Audio		Dual
	Blue		Blue
	Green		Green
	Red		Red
	Yellow		Yellow
	EPG		Guide
	Tv/AV		AV
	Text		Text
	FAV+/P+		Ch +
	FAV-/P-		Ch -
	Info		Info
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Exit		Exit
	A/B		Smart





	Original	Substituto	Original	Substituto
	USB	 Media		
	Rec	 Rec		
	Play	 Play		
	Pause/PP	 Pause		
	<<	 <<		
	>>	 >>		
	I<<	 I<<		
	>>I	 I>>		
	Stop	 Stop		
	FAV	 Pre Ch		
	Recall	 Back		

