 
 
 
 
 



 

 



 







 


 
 
 
 

 
 
 



 





Original	Substituto	Original	Substituto
	Power		Power
	Sleep		Sleep
	Menu		Menu
	TXT		Text
	TV		TV/R
	HDD		AV
	Timer		Shift + AV
	Rew		<<
	Play		Play
	FFwd		>>
	Record		Rec
	Pause		Pause
	Stop		Stop
	Card		Shift + Media
	Pvr set		Shift + Smart
	Live TV		Smart
	Back		Back
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Info		Info
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Fav		Shift + Pre Ch
	HD		D. Menu
	CH+		Ch +
	CH-		Ch -
	Subt		Subt
	Media		Media
	1		1





Original	Substituto
	
	
	
	
	
	
	
	
	
	 Shift + TV/R
	 Options
	 Guide
	 Pre Ch
	 Shift + Guide
	 Red
	 Green
	 Yellow

Original	Substituto
	 Blue
	 Shift + Exit

