


 




 













 
 








 



 




 









 






Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/ATV		D.Menu / Top
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substituto	Original	Substituto
	Menu		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	MTS		Info / Angle
	Rec List		Smart / List
	CH+		CH+ / Page+
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode





Original	Substituto
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 D.Menu / Top
	 Back / Return
	 Picture / Format
	 Sound / Title
	 Sleep / Timer

Original	Substituto
	 Menu / Home
	 AV / Input / RDS
	 Up
	 Left
	 OK
	 Right
	 Down
	 Exit / Cancel / Clear
	 Display / Media
	 Vol+
	 Vol-
	 Info / Angle
	 Smart / List
	 CH+ / Page+
	 CH- / Page-
	 Fav / Marker / PC
	 Rec / Rec Mode



