













 

 


 
 




 

Original	Substituto
 Power	 Power
 V-Mode	 D.Menu / Top
 Mute	 Mute / Dimmer
 SAT	 Shift + 0
 SAT	 Display / Media
 TV / AV	 AV / Input / RDS
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 FAV	 Fav / Marker / PC
 4	 4
 5	 5
 6	 6
 Pause	 Pause / Step / Freeze
 7	 7

Original	Substituto
 8	 8
 9	 9
 Page +	 Shift + CH+ /
 TV / Radio	 TV/Radio /
 0	 0
 <-- PR	 Back / Return
 Page -	 Shift + CH- /
 Up / PR +	 CH+ / Page+
 Up / PR +	 Up
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK / List	 Smart / List
 OK / List	 OK
 Right / Vol +	 Right
 Right / Vol +	 Vol+
 Down / PR -	 CH- / Page-
 Down / PR -	 Down





Original	Substituto
	Menu
	Menu / Home
	Exit
	Exit / Cancel / Clear
	Info
	Info / Angle
	EPG
	Guide / EPG / -/--
	Red / Find
	Red / Netflix / Search
	Green / V-Format
	Picture / Format
	Green / V-Format
	Green / APP / Repeat
	Yellow / TXT
	Text / Goto
	Yellow / TXT
	Yellow / YouTube / Repeat
	Blue / Audio
	Audio / Lang I/II
	Blue / Audio
	Blue / Prime Video / Random
	Record
	Rec / Rec Mode
	Play
	Play / Slow
	Stop
	Stop / Hold
	Shift
	Setup / OPT /
	<< Fast
	<< / Tune-
	>> Fast
	>> / Tune+

Original	Substituto
	< Slow
	I<< / Preset-
	> Slow
	>>I / Preset+

