 





 

 



 







 



 



 



 



 





 





















 







Original	Substituto	Original	Substituto
 P100	 Guide / EPG / -/--	 AV	 AV / Input / RDS
 Power	 Power	 0	 0
 REV	 Sleep / Timer	 TV	 TV/Radio /
 DOUB	 Smart / List	 P+	 Up
 1	 1	 P+	 CH+ / Page+
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 TV/TXT	 Text / Goto
 Hold	 Stop / Hold	 Menu	 Menu / Home
 4	 4	 Vol-	 Vol-
 5	 5	 Vol-	 Left
 6	 6	 OK	 OK
 SUB	 Subtitle / EQ	 Vol+	 Vol+
 Update	 Display / Media	 Vol+	 Right
 7	 7	 SWAP	 Back / Return
 8	 8	 P-	 CH- / Page-
 9	 9	 P-	 Down
 MIX	 D.Menu / Top	 16:9	 Picture / Format





	Original	Substituto		Original	Substituto
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			
	Violet/Info	 Info / Angle			
	[]	 Zoom / Size			
	PC	 Fav / Marker / PC			
	PT	 Setup / OPT /			

	Original	Substituto

