






 







 

 

 

 











 
 


 





 



 



 

 

 
















Original	Substituto	Original	Substituto
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Exit	 Exit
 4	 4	 Display	 Info
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 Sound	 Dual
 0	 0	 PIC	 Shift + Format
 ASPECT	 Format	 NICAM	 Media
 P.C.	 Pre Ch	 SLEEP	 Sleep
 MENU	 Menu	 TV	 Smart
 SOURCE	 Shift + AV	 AV	 AV
 Up	 Up	 HDMI	 Shift + Media

Original	Substituto	Original	Substituto
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Exit	 Exit
 4	 4	 Display	 Info
 5	 5	 Vol +	 Vol +
 6	 6	 Vol -	 Vol -
 7	 7	 CH +	 Ch +
 8	 8	 CH -	 Ch -
 9	 9	 Sound	 Dual
 0	 0	 PIC	 Shift + Format
 ASPECT	 Format	 NICAM	 Media
 P.C.	 Pre Ch	 SLEEP	 Sleep
 MENU	 Menu	 TV	 Smart
 SOURCE	 Shift + AV	 AV	 AV
 Up	 Up	 HDMI	 Shift + Media





Original		Substituto		Original	Substituto
SCART1	SCART1	AD SUBT	Subt		
Y.Pb.Pr	Y.PB.PR	SHIFT + AD SUBT	Shift + Subt		
RECALL	RECALL	RETURN BACK	Back		
	Red	A	Red		
	Green	B	Green		
	Yellow	C	Yellow		
	Blue	D	Blue		
REVEAL	Reveal	PLAY MODE	Play		
HOLD	Hold	II	Pause		
LIST	List	DISC NAV LIST	List		
INDEX	Index	■	Stop		
SUBPAGE	Subpage	REC MODE	Rec		
SIZE	Size	ECO 3D	3D		
AUTO	Auto	-/-- GUIDE	Guide		
TEXT	Text	REPEAT TEXT	Text		

