







 

























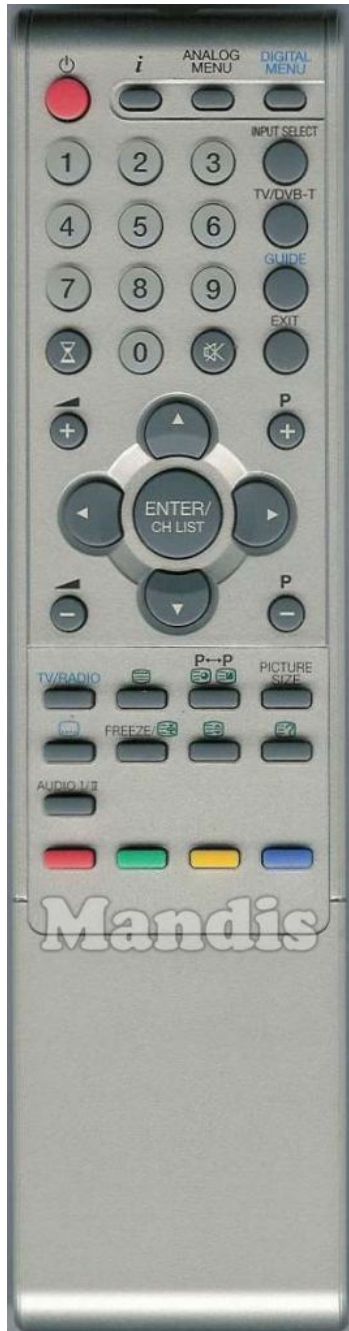








 

 


 








Original	Substituto	Original	Substituto
	Power		Power
	i		Info / Angle
	Analog Menu		Menu / Home
	Digital Menu		D.Menu / Top
	1		1
	2		2
	3		3
	Input Select		AV / Input / RDS
	4		4
	5		5
	6		6
	TV/DVB-T		Display / Media
	7		7
	8		8
	9		9
	Guide (EPG)		Guide / EPG / -/-
	Timer		Sleep / Timer

Original	Substituto	Original	Substituto
	0		0
	Mute		Mute / Dimmer
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Up		Up
	P+		CH+ / Page+
	Left		Left
	Enter/CH List		OK
	Enter/CH List		Smart / List
	Right		Right
	Vol-		Vol-
	Down		Down
	P-		CH- / Page-
	TV/Radio		TV/Radio /
	[≡]		Text / Goto
	[≡o] [≡o]/P↔P		Back / Return
	Picture Size		Picture / Format





Original	Substituto
 [...]	 Subtitle / EQ
 Freeze / [=+]	 Pause / Step / Freeze
 [=◆]	 Zoom / Size
 [=?]	 Setup / OPT /
 Audio I/II	 Audio / Lang I/II
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Substituto

