


 



 



 











 


 






















 



 





 












Original	Substituto	Original	Substituto
 Power	 Power	 8	 8
 Setup	 Options	 9	 9
 DSK	 Format	 0	 0
 HDMI/AV	 AV	 Vol+	 Vol +
 Edit	 D. Menu	 Vol-	 Vol -
 Copy	 Guide	 Mute	 Mute
 Movie	 Red	 Up	 Up
 Photo	 Green	 Down	 Down
 Music	 Yellow	 Right	 Right
 DIR	 Blue	 Left	 Left
 1	 1	 Enter	 Ok
 2	 2	 Repeat	 Text
 3	 3	 Step	 3D
 4	 4	 Pause	 Pause
 5	 5	 Play	 Play
 6	 6	 Stop	 Stop
 7	 7	 >>	 >>



