 

 



 

 



 

 























| Original | Substituto | Original | Substituto |
|---|------------|---|----------------------------|
|  | Standby |  | Power |
|  | Auto |  | Smart / List |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | -/-- |  | Shift + Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | Recall |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | Aspect |  | Shift + Picture / Format |

| Original | Substituto | Original | Substituto |
|---|------------|---|-----------------------|
|  | Audio |  | Audio / Lang I/II |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | Display |  | Display / Media |
|  | CH- |  | CH- / Page- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Input |  | AV / Input / RDS |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | FAV |  | Fav / Marker / PC |





| Original | Substituto |
|--|---|
|  FAV- |  Shift + CH- / |
|  FAV+ |  Shift + CH+ / |
|  EPG |  Guide / EPG / -/-- |
|  Text |  Text / Goto |
|  Hold |  Shift + Stop / |
|  Tv/Radio |  TV/Radio / |
|  Subtitle |  Subtitle / EQ |
|  Index |  Info / Angle |
|  Size |  Zoom / Size |
|  Reveal |  Setup / OPT / |
|  Subpage |  Eject / Surround |
|  Media |  Shift + Display / Media |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  Rec |  Rec / Rec Mode |

| Original | Substituto |
|--|---|
|  Stop |  Stop / Hold |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |

