



Original	Substituto	Original	Substituto
	Power		Power
	Netflix	+	Shift + Red / Netflix /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Original	Substituto	Original	Substituto
	Vol-		Vol-
	i		Info / Angle
	PR-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	EXit		Exit / Cancel / Clear
	World		Smart / List
	Camera/Music/Ph		Display / Media
	Guide		Guide / EPG / -/--
	*/o		Picture / Format
	Games		AV / Input / RDS





	Original	Substituto	Original	Substituto
	[≡]/Text	Text / Goto		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	Lang	Audio / Lang I/II		
	[≡]..	Subtitle / EQ		
	[-O-]	Zoom / Size		
	<<	<< / Tune-		
	Pause	Pause / Step / Freeze		
	>>	>> / Tune+		
	Rec	Rec / Rec Mode		
	Play	Play / Slow		
	Stop	Stop / Hold		

