
 






 

 











 









| Original | Substituto |
|---|--|
|  |  Power |
|  |  Stop / Hold |
|  |  Pause / Step / Freeze |
|  |  Rec / Rec Mode |
|  |  << / Tune- |
|  |  Play / Slow |
|  |  >> / Tune+ |
|  |  Guide / EPG / -/- |
|  |  Eject / Surround |
|  |  Display / Media |
|  |  AV / Input / RDS |
|  |  TV/Radio / |
|  |  Picture / Format |
|  |  Menu / Home |
|  |  Smart / List |
|  |  Shift + Smart / List |
|  |  Info / Angle |

| Original | Substituto |
|---|---|
|  |  Up |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Exit / Cancel / Clear |
|  |  Down |
|  |  Setup / OPT / |
|  |  Back / Return |
|  |  CH- / Page- |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  Mute / Dimmer |
|  |  Vol+ |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |





| | Original | Substituto | Original | Substituto |
|---|----------|--|----------|------------|
|  | 1 |  1 | | |
|  | 2 |  2 | | |
|  | 3 |  3 | | |
|  | 4 |  4 | | |
|  | 5 |  5 | | |
|  | 6 |  6 | | |
|  | 7 |  7 | | |
|  | 8 |  8 | | |
|  | 9 |  9 | | |
|  | Subtitle |  Subtitle / EQ | | |
|  | 0 |  0 | | |
|  | [≡]/Text |  Text / Goto | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

